

DESKTOP RADIO SCANNER

Quick Start Guide

WS1025

START HERE!

Package Contents:



Scanner



AC Adapter



Antenna

See the Owner's Guide for complete instructions



WHISTLER

CONNECTING POWER

1



AC Power


1. Connect the supplied adapter to the scanner's DC 9V jack.
2. Plug the adapter into a standard household power socket.
3. To disconnect, unplug the adapter from the power source first.

CONNECT ANTENNA

2

To attach the supplied telescopic antenna:

1. Insert the antenna in the hole on the top of the scanner.
2. Turn the antenna clockwise to tighten.

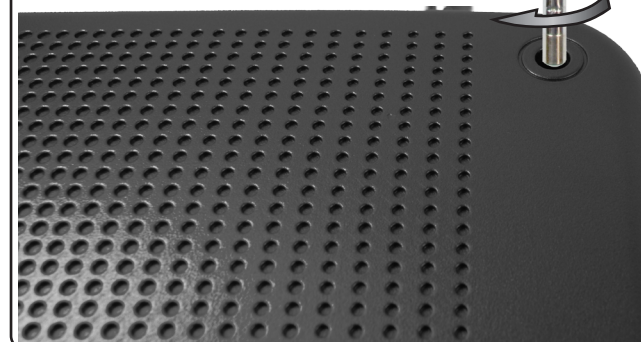

3

PROGRAM FREQUENCIES



Find Frequencies:

Go to www.radioreference.com and locate a list of frequencies in your area.

Program Frequencies:

1. Preset squelch between 10 and 12 o'clock position
2. Press PGM to enter the program mode. Enter the channel number (1-200) where you want to store a frequency, then press PGM again.
3. Use the number keys and the period(.) key to enter the frequency.
4. Press ENT to store the frequency into the channel.
5. Press PGM to go to the next.
6. Press SCAN to begin scanning.