## HANDHELD RADIO SCANNER

**Quick Start Guide** 

WS1040

### **START HERE!**

#### **Package Contents:**



Scanner













AC Adapter

**Battery** Holder

Belt Clip

#### Also Included:

Rechargeable

**Battery Holder** 

• User's Guide

See the Owner's Guide for complete instructions



# **INSTALL BATTERIES Rechargeable Battery** Holder

- 1. Slide open the battery compartment.
- 2. Place 4 AA batteries into the correct battery holder matching polarity symbols (+ / -):
  - Black Alkaline (non-rechargeable)
  - Yellow Rechargeable Ni-MH or Ni-Cd
- 3. Place the battery holder into the battery compartment. The battery holder fits only one way. Do not force it.
- 4. Replace the cover.



#### PROGRAM FREQUENCIES





Preset squelch between 10 and 12 o'clock position

We recommend programming your local radio systems using a Windows PC. You will need a membership in www.radioreference.com and a free 30-day download from either PSREdit.com or Starrsoft.com. This method does not require you to retype any frequencies or names and you do not need to know anything about trunking systems, you only need to know what you want to monitor from the radioreference lists.

If you wish to program by hand, look up your local frequencies at www.radioreference.com and refer to the owner's manual for detailed instructions.

P/N 581002b © 04/2014 The Whistler Group, Inc.