

DESKTOP RADIO SCANNER

Quick Start Guide

WS1065

START HERE!

Package Contents:



Scanner



Antenna



AC Adapter



Mounting Bracket



PC/IF Cable

Also Included:

- Screw (2)
- DIN sleeve
- Keys (2)
- Rubber washer (2)
- Lock washer (2)
- Rubber feet (5)
- Knob (2)
- DC cable with fuse
- User's Guide

See the Owner's Guide for complete instructions



WHISTLER

1 INSTALL BRACKET




For desktop use:

1. Attach the protective rubber feet to the mounting bracket as shown.
2. Slide the scanner into the bracket, aligning the scanner's side holes with the holes in the bracket, and then screw the mounting knobs into the scanner.

Refer to your User's Guide for bracket mounting and vehicle installation.

2 INSTALL ANTENNA

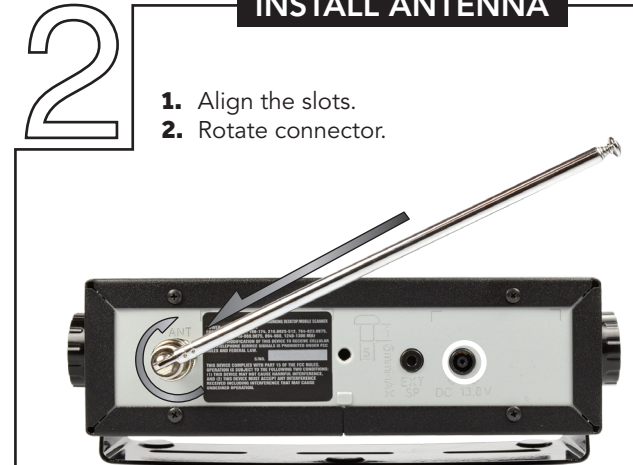


1. Align the slots.
2. Rotate connector.

AC Power

1. Connect the supplied adapter to the scanner's DC 13.8V jack.
2. Plug the adapter into a standard household power socket.
3. To disconnect, unplug the adapter from the power source first.

3 PROGRAM FREQUENCIES

3

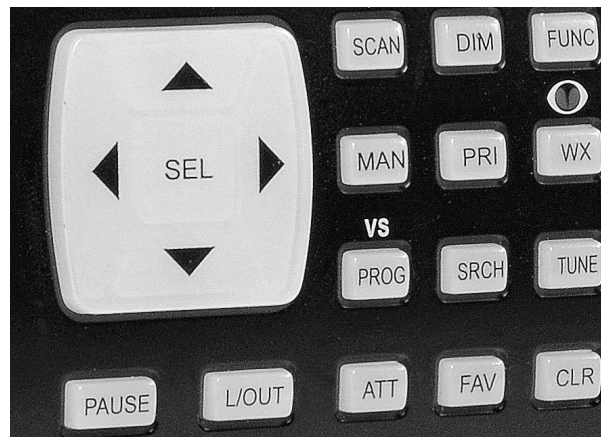

Preset squelch between 10 and 12 o'clock position

We recommend programming your local radio systems using a Windows PC. You will need a membership in www.radioreference.com and a free 30-day download from either PSREdit.com or Starsoft.com. This method does not require you to retype any frequencies or names and you do not need to know anything about trunking systems, you only need to know what you want to monitor from the radioreference lists.

If you wish to program by hand, look up your local frequencies at www.radioreference.com and refer to the owner's manual for detailed instructions.