

# Vantage PRO2™ INSTALLATION DIAGRAM

## Wireless Vantage Pro2™ System (Envoy with Integrated Sensor Suite)

This diagram shows an Integrated Sensor Suite wirelessly connected to a Weather Envoy™, which is connected to a computer. The transmission distance between an Integrated Sensor Suite and an Envoy is up to 1000' line of sight, or up to 600' through walls and other obstructions. The cable distance between an Envoy and a computer is 8' using a USB connection.

